
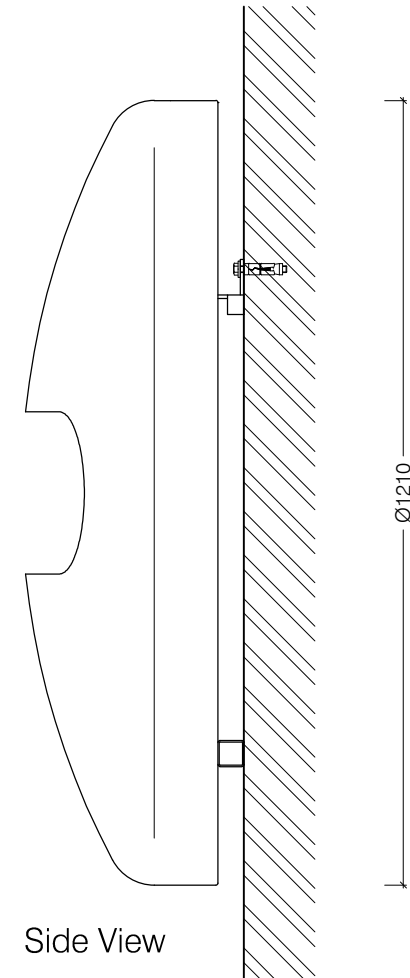
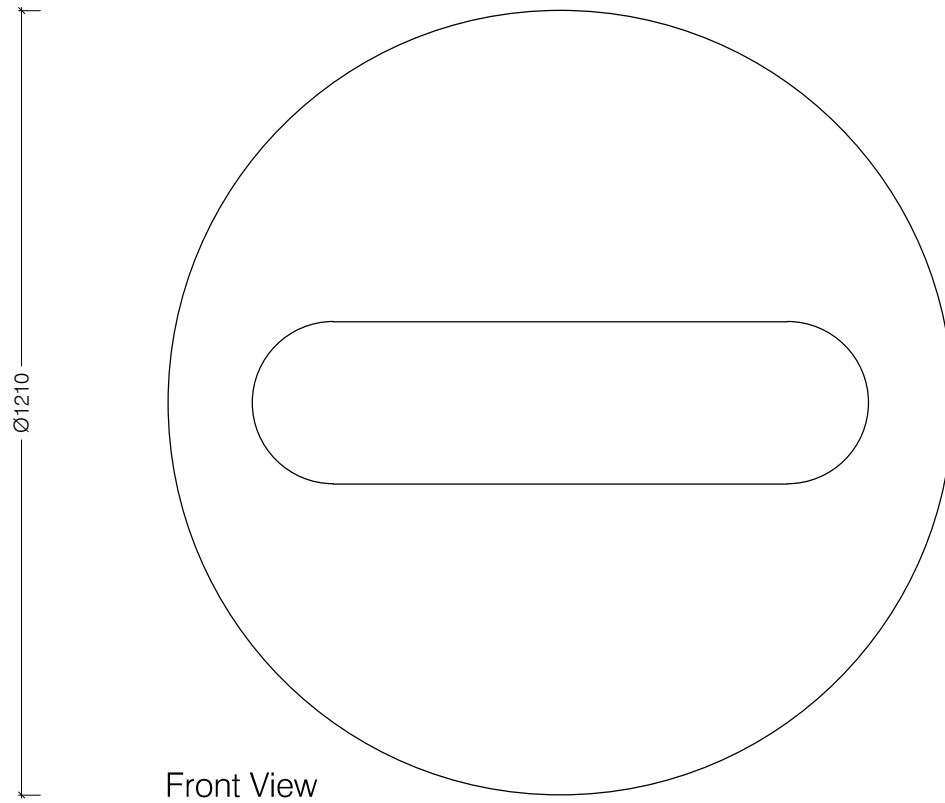



NOTE: Please refer to the installation manual enclosed in the packaging for full installation guidelines and instructions.

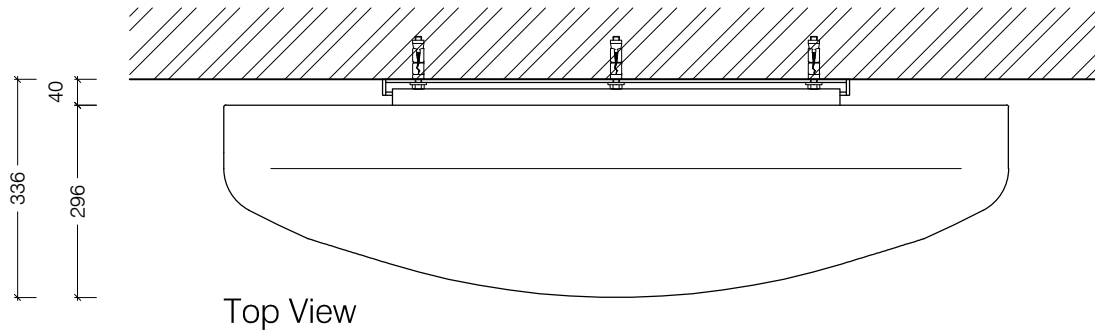

BF090 - Dot Flat Back $\text{Ø}1210$